LIVING™
BY NOSTALGIA

All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2013 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 05/30/13)

LIVING™
BY NOSTALGIA

EWC008BLK

8-Bottle Electric Wine Cooler

Instructions

Visit **www.nostalgiaelectrics.com** for more products.

CONTENTS

IMPORTANT PRECAUTIONS 3
IMPORTANT SAFEGUARDS 3
INTRODUCTION 5
HOW TO OPERATE 5
PARTS & ASSEMBLY 6
HELPFUL TIPS 7
CLEANING & MAINTENANCE 7
RETURNS & WARRANTY 8

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:
110 Volts, 60 Hertz
70 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse motor in water.
2. NEVER use an abrasive sponge or cloth on the exterior of the unit, as this will ruin the finish.
3. Unplug unit from outlet when not in use and during cleaning.
4. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions. Contact an authorized service technician if the wire is damaged.
5. DO NOT clean any parts of this unit in a dishwasher.
6. DO NOT use or store outdoors.
7. To disconnect, turn any control to "OFF," then remove plug from wall outlet.
8. This appliance is NOT A TOY. Keep out of reach of children.
9. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
10. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Read all instructions before operating this appliance.**
2. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
3. DO NOT place on or near a hot gas or electric burner, nor in a heated oven. DO NOT use outdoors.
4. Unplug from outlet when not in use, before removing parts and before cleaning.
5. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
6. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
7. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
8. Extreme caution must be used when moving this appliance.
9. DO NOT use the appliance for other than its intended use.
10. An appliance that is plugged into an outlet should not be left unattended while in operation.
11. DO NOT attempt to disassemble the motor of this unit. Electrical shock or fire may occur as a result of tampering with the motor.
12. A short power supply cord is provided to reduce the risk of becoming entangled or tripping over a long cord.
13. Longer detachable power supply cords can be used if care is exercised in their use.
14. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance. The voltage and frequency of this product should be 110V, 60Hz.
15. This appliance must be grounded. Connect only to properly grounded outlet.

16. NEVER put anything living into the wine cooler for risk of severe injury or death.
17. DO NOT cover or block any ventilation openings on the appliance.
18. Keep the internal temperature as high as you can, which will reduce energy consumption and save you money.
19. DO NOT continuously open and close the wine cooler door during normal use.
20. DO NOT let cord hang over the edge of a table or countertop.
21. DO NOT interrupt the power by pulling the power supply cord and/ or pulling the power plug out of its socket directly.
22. DO NOT store explosive substances such as aerosol cans with a flammable propellant in this appliance.
23. If the wine cooler light fails, consult an authorized service technician or electrician.
24. DANGER! RISK OF CHILD ENTRAPMENT! Before you throw away your old refrigerator or freezer, TAKE OFF THE DOORS! Leave the shelves and drawers in-place so that children may not easily climb inside.
25. DO NOT dispose of this product as unsorted municipal waste. Collection of such waste separately, for special treatment, is necessary.
26. It is best to not store objects on top of this appliance which are magnetic, heavy or filled with water or other liquids. Electronic components may not work if water gets inside of this appliance. Do not store valuable objects, objects that are adversely affected by temperature or serum, bacterin, etc. inside or on top of the appliance.

SPECIAL SAFETY NOTICE:

• If gas leaks from its container, don't pull the plug out or in, as it may cause sparks or fire.
• Don't splash water on the back of the appliance, as it may cause malfunction or electric shock.
• Don't store flammable materials such as ether, benzene, gas or glue in the wine cooler.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the **LIVING BY NOSTALGIA 8-BOTTLE ELECTRIC WINE COOLER**. This sleek, modern appliance keeps your bottles cool and on display, yet is discreet enough in look and in sound to be a classic addition to any interior.

FEATURES

- 23L of storage for loading up to 8 bottles
- Slide-out chrome shelves
- Blue interior lighting, with on/off switch
- Blue LED display with touch keys
- Double-pane door with stainless steel handle
- Temperature range of 51° to 64° F (11°C to 18°C)
- Auto-defrost
- No compressor, no vibration means low-to-no noise and bottle-sediment is not disturbed
- Eco-friendly: no refrigerant needed
- Adjustable level foot

HOW TO OPERATE

Before first use, clean the unit by removing the shelves and rinsing the cabinet with soda water, then rinsing with clean water. Use a slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of the Main Unit, then wipe with a non-abrasive towel to dry. Wipe down shelves and put back in place.

1. After cleaning, find a flat surface near an electrical outlet. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed, but use with caution.
2. Plug unit in, then find the arrow buttons on the cabinet door. The temperature is pre-adjusted in the range of 51° to 64° F (11°C to 18°C) in the cabinet. To change this preset, use the up and down arrows. To change from Fahrenheit to Celsius, press both arrows at the same time.
3. Once the unit is plugged in, the cooling system will begin to work. When the interior temperature reaches the preset point, the cooling system will go into half-power mode to keep the temperature constant.

PARTS & ASSEMBLY

Your ELECTRIC WINE COOLER comes mostly assembled. Simply attach the included door handle with the two included screws.

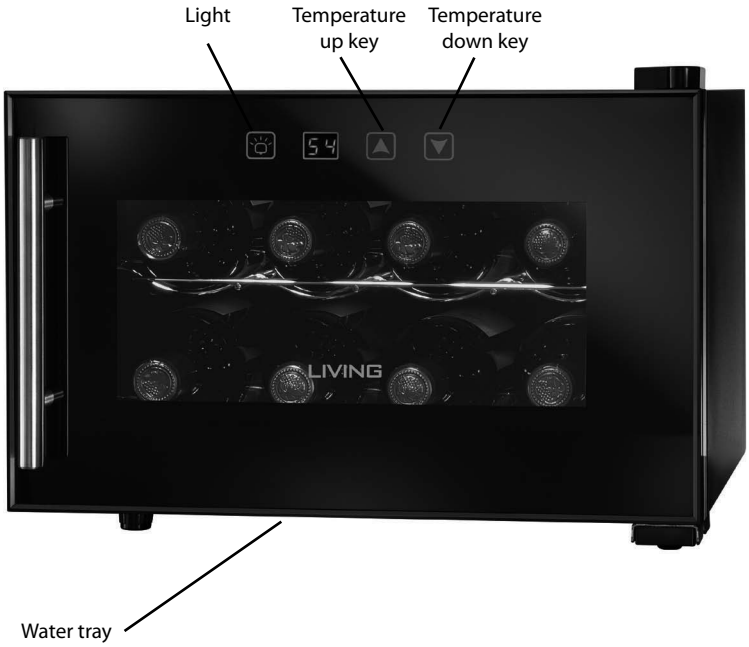

HELPFUL TIPS

- To ensure functioning at full potential, place this unit on a flat floor, with 2cm of space at each side and 10cm of space on the backside
- To prevent unit from overheating, avoid placing it in direct sunlight or in high temperatures
- Do not place heavy articles on top of the unit
- **If unit is not cooling**, check that it is plugged in, ensure that the voltage is appropriate, or have a licensed professional check and replace the fuse.
- **If unit temperature is not low enough**, make sure that the unit is not near a heat source or in direct sunlight, that it is in an area with good ventilation and that the fans are not blocked, or ensure that the door is being closed tightly. Maximum cooling is dependent upon ambient temperature.
- **For the best tasting wine, keep the following optimal storage temperature guidelines in mind:**

  Full-bodied white wines and light, fruity reds: Serve at 52° to 61° F (11°C to 16°C)
  Full-bodied red wines and ports: Serve at 63° to 65° F (17°C to 18°C)

CLEANING & MAINTENANCE

1. Ensure all switches are OFF.
2. Make sure appliance is unplugged.
3. Remove items and shelves, clean the cabinet with soda water, then rinse with clean water.
4. DO NOT use soap or detergent for the cabinet.
5. DO NOT clean any parts of this unit in a dishwasher.
6. Use a slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of the Main Unit, then wipe with a non-abrasive towel to dry.
7. To preserve and maintain the life of your Electric Wine Cooler, clean unit regularly.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

8-BOTTLE ELECTRIC WINE COOLER/EWC008BLK

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is subject to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This product is not recommended for use outside of North America. The warranty is void if products are exported outside of the USA, Canada or Mexico.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgiaelectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.
Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.
Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.